

MX-600 IC HEATER

Instructions Manual

SIRUCTURE

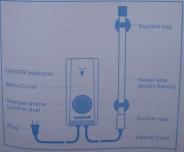

-ionion

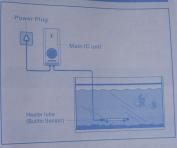

OPERATION

- (1). First, connect the heater according to APPLICATION and immerse the heater into the water completely.
 - 2). Plug the IC heater, Please adjust the knob till it catches

When 'HEATER' indicator is on, it means the IC heater is working.

When 'HEATER' indicator is off, it means the IC heater is not working.

Volt Control Range	220V ~ 50Hz 20°C ~ 34°C
Heater Wattage	300 W
Accuracy	±1°C

FEATURES

- for salty and fresh water.
 - 2). The sensor is built-in the stainless heate

CAUTIONS

- It is not waterproof. Please place the controller in dry and far away from the tank.
 -). Be sure the temp. controller works normally, please tix the heater into the water well.
 - Please check the temp. controller periodically. If there is any breakage or out of control, please stop to use and contact the distributor or manufacturer for help. Don't
- (4). Keen it amage to the state of
- (5). Before clean the tank, please unplug the temp

Product:	
ddress:	
	Tel: Purchasing Date:

ongcheng Aquarium Equipment Factory